

E-LAPTOP PRO

(Hotel Mode)

User Instructions



Note: Home users may switch to home mode as per instructions given on page no 7 (Section 5, Operational Mode)

Be Intelligent. Be Safe.

E-LAPTOP PRO SAFE

Attractive design, suitable for use in hotels, apartments, offices and homes. Utilising a proven and reliable electronic circuit with embedded technology.

Height x Width x Depth:

200mm x 420mm x 370mm

Weight: 12 Kgs **Volume:** 23 Ltrs

Batteries:

Four 1.5Volts AA Size Alkaline



SPECIAL FEATURES



Mechanical override
in case password is forgotten



Enabled with a
master password



Low battery indicator



Auto freeze after four
consecutive wrong attempts



Non Volatile memory
prevents password erasure,
when the battery is low



USB data retrieval

Features

- 1 Motorised Locking
- 2 Durable Finish
- 3 Two Solid Steel Bolts
- 4 Enhanced Battery Life
- 5 Non Volatile memory prevents password erasure, when the battery is low
- 6 Automatic Lockout after four consecutive wrong password entries
- 7 One Piece moulded keypad
- 8 Emergency Manual Key Override
- 9 3-6 digit personal code

PACKAGE CONTENTS



Safe



 
Warranty Card



User Manual



Anchoring Bolts



Override Keys

TOOLS REQUIRED*



Drill Machine



Spirit Leveler



Drill Bit



Mallet




Spanner

Note: Not included in the package contents.

*To grout/mount the safe


GROUTING PROCESS

1

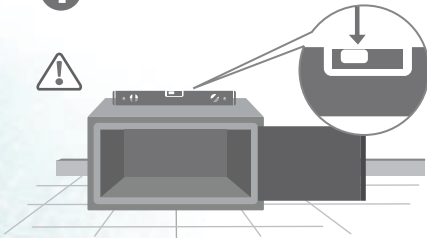


Using spirit level, check if the safe is evenly placed on the ground or against the wall or inside the wardrobe (depending on where it is to be grouted). If not, choose a different location for grouting.

2

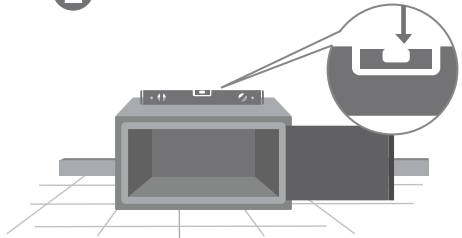


Spirit level lets you know precisely if the safe is evenly placed.

3

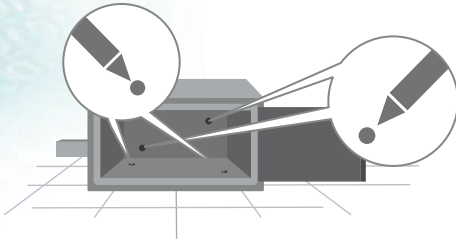


Through the holes inside the safe, make markings on the ground or the wall or inside the wardrobe.

4

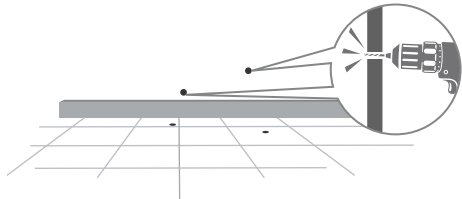


Drill holes into the ground or the wall or the inside of the wardrobe.

5

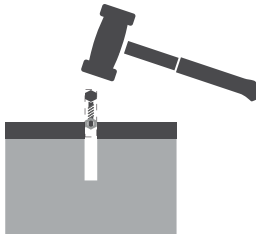

Fix the safe by hammering the anchoring bolts (provided in the kit) through the holes.

6

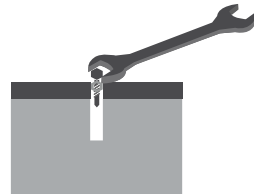

Tighten the anchoring bolts with a spanner.

IMPORTANT INSTRUCTIONS

- Please keep this manual and override keys in a safe place (**NOT INSIDE THE SAFE**)
- **DO NOT** use any liquid while cleaning the keypad, you could use a damp cloth if required
- Make sure the safe is anchored properly as it can fall and hurt people and property
- **DO NOT** place any liquid on top of the safe, a spill on the keypad may render the safe inoperable
- **DO NOT** overstuff the safe or you can damage the motor mechanism or the contents
- **DO NOT** open the back cover or try to repair the safe yourself. In case of any problem contact **GSS call centre at 1800 20 999 55**



HOTEL MODE OPERATION

1. **To open the safe:** Enter personal code which was entered while locking the safe. The factory default personal code is "1234". When the display shows "**OPEN**", the bolts will retract automatically. After bolts have fully retracted, the display will show "**OPENED**". Now, open the door by pulling from the bottom of the keypad.
2. **To lock the safe:** Close the door and enter personal code and press **LOCK** button. The display will show "**CLOSE**", the bolts will extend automatically. After bolts have fully extended, the display will show "**CLOSED**".

Note: Master code can only be used to unlock the safe.

WARNING:

The safe can be unlocked only with the password entered during the last locking operation.

TO CHANGE THE PERSONAL CODE IN HOTEL MODE

In Hotel mode, every time you close the safe, you can enter a new personal code and press **LOCK**. The safe will open with the last entered personal code only.

HOME MODE OPERATION

1. To open the safe: Enter personal code. When the display shows “**OPEN**”, the bolts will retract automatically. After bolts have fully retracted, the display will show “**OPENED**”. Now, open the door by pulling from the bottom of the keypad.
2. To lock the safe: Close the door and press **LOCK** button. The display will show “**CLOSE**”, the bolts will extend automatically. After bolts have fully extended, the display will show “**CLOSED**”.

Note: Master code can only be used to unlock the safe.

TO CHANGE THE PERSONAL CODE IN HOME MODE

1. Open the safe.
2. Press **CLEAR** twice, display will show “**PROG**”.
3. Press **68 LOCK**, display will show “**NEU**”.
4. Enter the new code and press **LOCK**. Safe will close.

Note: Default Personal Code is "1234"

TO CHANGE THE MASTER CODE

1. Open the safe.
2. Press **CLEAR** key twice, display will show “**PROG**”, then enter original master code. The factory set master code is 800000. Then the display will show “**NEU**”.
3. Enter the 6 digit code you desire, the display shows “**AGAIN**”, then enter the code again and press **LOCK** key to confirm.
4. The display will show “**DONE**” to indicate new master code has been set up successfully.

WARNING:

For security purposes, you should change the factory default code as soon as possible. Godrej Security Solutions shall not be responsible for any theft caused by such negligence.

TO STOP YOUR CODE FROM BEING DISPLAYED

1. Open safe using your Personal Code.
2. Press **CLEAR** twice, the display will show "**PROG**".
3. When "**PROG**" disappears, press **751019** within 5 seconds.
4. **171301** will appear, with the first digit flashing, press **(0)** then press **LOCK** thrice. The display will go blank.
5. Close the safe (you will have to press your Personal code to lock door).
6. By entering personal code, check if this feature is activated. You will see that "---" will appear instead of your personal code.

HOT KEY – Viewing/Not Viewing Password While Keying In:

If your lock is set so that your code appears and you need it to not appear one time, you can press **(0)** then **LOCK** key before your code. Only dashes will appear for that one time. The next time you press your code it will appear as usual.

Likewise, if your lock set up so that your code does not appear, you can press **(9)** then **LOCK** and your code will appear for that one time only.

This function applies to both modes (Home mode & Hotel mode.)

TO ACCESS THE PROGRAMMING

- Open the safe.
- Press **CLEAR** twice, the display will show "**PROG**".
- Press **751019** while the word "**PROG**" disappears.
- A 6-digit code will appear on the screen with the first digit blinking. This code denotes the current setup for the safe.
- Each of the 6 digits corresponds to one section of the programming as explained in detail below.
- In order to change the programming setup, the correct digits have to be entered at the correct positions.

To set up the different features listed below, you must first decide how you want the safe to function.

Section 1 (1st Digit) Code appearance on display

Press 0: If you DO NOT want your code to appear on the display (only dashes will appear) with beep sound when you press each key button. (Default)

Press 1: If you want your code to appear each time you press your code and then will flash your code for verification one time. Beep sound when you press each key button.

Press 2: If you want your code to appear each time you press your code, with beep sound when you press each button.

Section 2 (2nd Digit) Preferred number of digits in your code

Press 3: To use a 3-digit code.

Press 4: To use a 4-digit code.

Press 5: To use a 5-digit code.

Press 6: To use a 6-digit code.

Press 7: To choose the length of code (3-6 digits) when you set the code. (Default)

Section 3 (3rd Digit) Lockout delay

If the wrong code is entered 4 times in a row, the keypad will shutdown for a length of time that you set.

This is to deter someone from opening your safe by trying random number. You must pick one of these three options:

Press 0: For no lockout delay.

Press 1: For a 15 minute delay. (Default)

Press 2: For a 30 minute delay.

Section 4 (4th Digit) Master code

The master code will open the safe if you lose the code and override keys. The master code is preset at the factory.

Press 2: To turn OFF the master code feature.

Press 3: To turn ON the master code feature. (Default)

Section 5 (6th Digit) Operational mode

This feature allows you to change how the safe operates, either for home mode or hotel mode.

Press 0: To set for home mode.

Press 1: To set for hotel mode. (Default)

Press **LOCK** thrice to exit Program mode

Note: The Factory default setting is "071301"

TO SET DATE AND TIME

- Open the safe
- Press **CLEAR** twice, the display will show “**PROG**”
- Press **751019** & **LOCK** while the word “**PROG**” disappears.
- The current setup will appear with the first digit flashing
- Press **LOCK** to enter Date setup
- Set Date in DDMMYY format

For Example:



(Display image should be in 7 segment font)

Means: 10th June 2013

- Press **LOCK** to enter Time setup
- Set Time in HHMMSS format

For Example:



Means the Time is 11:43:10 AM

- Press **LOCK** to exit the Program mode

TESTING AND REPLACING THE BATTERIES

Test battery level:

Battery levels can be tested either with the door opened or closed

Press **LOCK** key. The display will show “**bA-HI**” or “**bA-LO**”. “**bA-LO**” means that you need to replace the batteries.

Replacing the Batteries:


1. Open the Safe using your personal code. If the batteries are dead, use the Emergency Override key.
2. Remove the battery cover on the back panel by unscrewing the Phillips screw.
3. Remove all four used batteries.
4. Replace the batteries with four 1.5V AA size alkaline batteries.
5. Put back the battery cover.
6. Dispose the used batteries in an environment friendly way.
7. Put back the Phillips screw to secure the battery cover.
8. Keeping the door open, test the safe to make sure it works.



Note: Every time you replace the batteries, you need to set Date and Time.

EMERGENCY OVERRIDE KEY

1. Pull out the plastic cap placed below the LCD screen beside the keypad. The opening for override key cylinder will be visible underneath.
2. Using one of the override keys, insert into the cylinder and rotate clockwise to open the safe.
3. While the door is open and the key is still turned, follow the instructions to set the personal code.

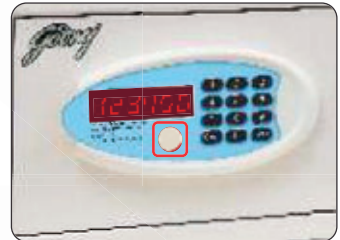

Note: When you set the new personal code, rotate the key to the locked position, so that it can be removed. If you get an error message, wait until the motor stops moving and then turn the key back to locked position and remove it. Your new personal code will still remain.

WARNING:

Keep the override keys in a safe place other than inside this safe. These keys are to be used in emergencies.

ERROR MESSAGES

Listed below are error codes you might encounter:



ERROR

ERROR This means that you have pressed an incorrect personal code. Verify your personal code and try again. If you get this error four times consecutively, the keypad will lock out for 0/15/30 minutes.



HOLD-15

HOLD 15 This means the safe has entered the lockout period. You will not be able to open the safe during the lockout period. By pressing any key during this period you can see how much time is left until the lockout is over. If your personal code still doesn't work, use the override keys to reset the safe. (see "TO ACCESS THE PROGRAMMING" section 3)



ERROR 1

ERROR1 This means that the bolts failed to retract fully. Press the door towards the inside while entering your personal code. If you still cannot open your safe then contact GSS call center on 1800 20 999 55



ERROR 2

ERROR2 This could also mean that the bolts failed to extend fully. Most likely because the safe is too full. Press the door to close it fully while pressing your personal code. If you still cannot close your safe then contact the GSS call center on 1800 20 999 55.

INFORMATION ON E-WASTE HANDLING AND MANAGEMENT

Dear Customer,

The Ministry of Environment and Forests have published The E-waste (Management and Handling) Rules 2010 which comes in effect from 1st May 2012.

E-waste is defined as any electrical or electronic component of products in whole or in part, or rejects from their manufacturing or repair process which are intended to be discarded.

These rules apply to every producer; consumer or bulk consumer involved in the manufacture, sale, and purchase and processing of electrical and electronic equipment or components as specified in Schedule 1 (please refer to our website www.godrej.com in the 'Good & Green' section of CSR module for more details).

Under these rules, specific roles and responsibilities are defined for producers, consumers and recyclers handling and managing e-waste.

E-waste is to be managed in an environmentally sound manner which means, taking steps to ensure that health and environment are protected from adverse effects of hazardous substance contained in such wastes.

Rule 6 of the E-waste (Management and Handling) Rules 2010 states that bulk consumers of electrical and electronic equipment shall be responsible for recycling of the e-waste generated by them. Bulk consumer means bulk users of electronic and electrical equipment such as Central Government or State Government Departments, public sector undertakings, banks, educational institutions, multinational organisations, international agencies, private companies that are registered under the Factories Act 1948 and Companies Act 1956. The bulk consumers have to ensure that the e-waste generated by them is channelised to authorised collection centres or is taken back by the producers. They shall maintain records of e-waste generated by them in Form 2 and make such records available for scrutiny by the State Pollution Control or the Pollution Control Committee concerned.

All consumers of electrical and electronic equipment irrespective of their status as bulk consumers or not, shall ensure that e-waste generated by them is channelised to authorised collection centre(s) or registered dismantler(s), or recycler(s) or is returned to the pick-up/ take back services provided by the producers. (Please refer to our website www.godrej.com in the 'Good & Green' section of CSR module for more details).

All our products intended to be recycled under the category of e-waste (as defined above) carry a label or stamp of the WEEE symbol (A wheelie bin with a cross), which states that it falls under the hazardous waste category and is not to be disposed along with normal garbage.

We seek your support in ensuring environmentally sound management of e-waste and aid us in sustaining our earth's natural resources and maintaining the earth's green cover intact for the benefit of our future generations.



RECORD OF PURCHASE

Please fill your details below for future reference.

Date of purchase: _____

Product model: _____

Name & address of Distributor/Dealer: _____

Distributor phone number: _____

FOR SAFETY, PLEASE READ THIS MANUAL PRIOR TO USE.



Godrej & Boyce Mfg. Co. Ltd.

Gorej Security Solutions

Regd. Office: Plant No. 17, Pirojshanagar, Vikhroli, Mumbai 400 079

Tel: 022-67961700/1800 Fax: 91-22-67961509

Toll-free: 1800 209 9955 | SMS 'GSS' to 53636 | Email: secure@godrej.com | Visit: www.godrejsecure.com

In view of the Godrej Policy of continuous development and improvement, the dimensions as seen on the catalogue of the product may not match with the actual product. The colour combinations of the products as seen on this catalogue may vary and not match with the actual colour of the product due to printing limitations.

An ISO 9001:2008/ISO 14001:2004/ BS OHSAS 18001:2007
Products Marketed and Serviced By Godrej & Boyce Mfg. Co. Ltd.