

# TAURUS

(Hotel Mode)

## User Instructions



\*Home users may switch to home mode as per instructions given on page no. 5

**Be Intelligent. Be Safe.**

## TAURUS SAFE:

Attractive design, suitable for use in hotels, apartments, offices and homes. Utilising a proven and reliable digital operating system.




### FEATURES

- Interior Carpet
- Motorised Locking
- Two Solid Steel Bolts
- One Piece Moulded Keypad
- Durable Finish
- Low Consumption Motor
- Emergency Manual Key Override
- Automatic Shutdown after 4 consecutive wrong password entries
- Non-Volatile Memory
- 3-6 Digit Personal Code

## IMPORTANT INSTRUCTIONS

- Please keep this manual in a safe place **(NOT INSIDE THIS SAFE)**
- Make sure the safe is anchored properly as can fall and hurt people and property
- **DO NOT** use any liquid while cleaning the keypad, you could use a damp cloth if required
- **DO NOT** place any liquid on top of the safe, a spill on the keypad may render the safe inoperable
- **DO NOT** open the back cover or try to repair the safe yourself. If there is any problem contact your distributor or service personnel from Godrej Security Solutions
- **DO NOT** overstuff the safe or you can damage the motor mechanism or the contents
- **DO NOT** keep the override keys inside this safe

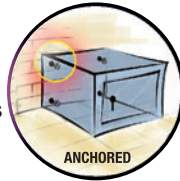

### Opening With The Pin:

1. Type in your PIN. When the display will show "OPEN", the bolts will retract automatically. Open the door by pulling from the bottom of the keypad.

### Closing The Safe:

1. Close the door and enter user code and press (#) button. When the display shows "CLOSED", the bolts will extend automatically.

## TO CHANGE THE MASTER CODE

1. Open the safe
2. Press (\*) key twice, display will show "PROG", then enter original master code (factory preset is 800000), display will show "NEU".
3. Enter the 6 digit code you desire, the LED display shows "AGAIN", then enter the code again and press (#) key to confirm.
4. The LED display will show "DONE" to indicate new master code has been set up successfully.

### Note:

Default Master Code "800000"

**WARNING:**

For security purposes, you should change the factory default code as soon as possible. Godrej Security Solutions shall not be responsible for any theft caused by such negligence.

**HOME MODE OPERATION**

1. Enter personal user code and then press (#) to lock the safe.
2. To unlock the safe: Enter personal user code.
3. To lock the safe: Simply press (#)

**Note:**

Master code can only be used to unlock the safe.

**TO CHANGE THE USER CODE IN HOME MODE**

1. Open the safe.
2. Press (\*) twice, display will show “PROG”.
3. Press 68#, display will show “NEU”.
4. Enter the new code and press (#), safe will close.

**Note:**

Default User Code “1234”

**HOTEL MODE OPERATION**

1. To lock the safe: Enter personal user code and then press (#).
2. To unlock the safe: Enter personal user code which was entered while locking the safe.

**Note:**

Master code can only be used to unlock the safe.

**WARNING:**

The safe can be unlocked only with the password entered during the last locking operation.

**TO STOP YOUR PIN FROM BEING DISPLAYED**

1. Open safe using your PIN.
2. Press \*(asterisk), the display will show “PROG”.
3. When “PROG” disappears, press 751019 within 5 seconds.

- 171301 or 171311 will appear, with the “1” flashing, press 0 then press (#) thrice. The display will go blank.
- Close the safe (You will have to press your PIN to lock the door).
- Test the safe. You will see that “\_\_\_” will appear instead of your PIN.

#### **Hot Keys – Viewing/not Viewing Password While Keying In:**

If your lock is set so that your code appears and you need it to not appear one time, you can press **(0)** then **(#)** key before your code. Only dashes will appear for that one time. The next time you press your code it will appear as usual.

Likewise, if your lock is set up so that your code does not appear, you can press **9** then **(#)** key before your code and your code will appear for that one time only.

This function applies to both modes (Home mode & Hotel mode).

## **TO ACCESS THE PROGRAMMING**

#### **WARNING:**

**This section of the programming is not to be used by the customer. Only an authorised Godrej Security Solutions representative may access this section.**

- Unlock the safe
- Press (\*) twice, the display will show “PROG”
- Press 751019 while the word “PROG” disappears
- The current setup will appear with the first digit flashing
- All 6 sections must be entered within 10 seconds. You can change all sections or as few as one section but all 6 sections must be entered if you are making any changes to section 1-6. To keep a section programmed as it is currently set, simply press the same numbers that are currently displayed for that section.
- Press (#) key thrice to exit the mode.

To set up the different features listed below, you must first decide how you want the safe to function.

#### **Section 1 (1<sup>st</sup> Digit)**

Code appearance on display

Press 0: If you DO NOT want your code to appear on the display (only dashes will appear) with beep sound when you press each key button (Default).

Press 1: If you want your code to appear each time you press your code.

#### **Section 2 (2<sup>nd</sup> Digit) Preferred number of digits in your code**

Press 3: To use a 3-digit code.

Press 4: To use a 4-digit code.

Press 5: To use a 5-digit code.

Press 6: To use a 6-digit code.

Press 7: To choose the length of code (3-6 digits) when you set the code (Default).

### **Section 3 (3<sup>rd</sup> Digit) Lockout delay**

If the wrong code is entered 4 times in a row, the keypad will shut down for a length of time that you set.

This is to deter someone from opening your safe by trying random number. You must pick one of these three options:

Press 0: For no lockout delay.

Press 1: For a 15 minute delay(Default).

Press 2: For a 30 minute delay.

### **Section 4 (4<sup>th</sup> Digit) Master code**

The master code will open the safe if you lose the code and override keys. The master code is preset at the factory.

Press 2: To turn OFF the master code feature.

Press 3: To turn ON the master code feature (Default).

### **Section 5 (6<sup>th</sup> Digit) Operational mode**

This feature allows you to change how the safe operates, either for home mode or hotel mode.

Press 0: To set for home mode.

Press 1: To set for hotel mode (Default).

## **MOUNTING**


### **Mounting Through The Bottom Of The Safe:**

- Check the floor for what type it is (wood, tile, concrete)
- Get the appropriate anchors for the type of floor you have
- Check location on floor for concealed wires or pipes
- Mark the floor to drill for your anchor
- Drill the appropriate size hole for the anchors you have
- Mount the safe, making sure it is secure
- For mounting to the top of a cabinet you may want to use carriage bolts through the top of the cabinet
- **DO NOT** mount to a shelf in a cabinet or closet without anchoring to the wall behind the safe



### Mounting Through The Back Of The Safe:

- Check the wall or cabinet for structural soundness
- For safety, have someone help to hold the safe during mounting
- Check location for concealed wires or pipes
- Mark the surface to drill holes for the anchors you will be using
- Drill the appropriate size holes for the anchors you are using
- Having someone hold the unit, anchor the safe to the wall
- Test the strength of the mounted safe so it will not fall off of the wall or cabinet
- **DO NOT** place safe on a shelf without proper mounting into a wall

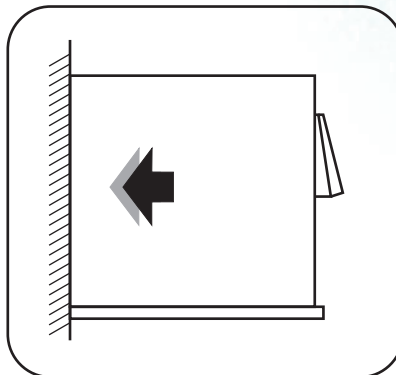

### Mounting Tips:

- The safe may be mounted to a wall or the inside of a cabinet or on the floor
- When mounting to a wall or cabinet, be sure of the load bearing so as to hold the weight of the safe and the contents  
(Failure to do so could result in the safe falling and damaging property and people.)

## TESTING AND REPLACING THE BATTERIES

### Test battery level:

Test battery level can be tested either with the door open or with the door closed and locked.

1. With door open: Press any number and then **(#)** key. Display will show **“bA-HI”** or **“bA-LO”**. **bA-LO** means that you need to replace the batteries.  
This condition applies to both modes (Home mode & Hotel mode).
2. With the door close: Press **(#)** key. The display will show **“bA-HI”** or **“bA-LO”**. **“bA-LO”** means that you need to replace the batteries.

### Replacing the Batteries:

1. Open the Safe using your personal code or magnetic strip card or, if the batteries are dead use Emergency Override key.
2. Remove the battery cover on the back panel by unscrewing the Phillips screw.



3. Remove the used 4 batteries.
4. Replace the batteries with 4 AA size alkaline batteries.
5. Replace the battery cover.
6. Dispose the used batteries in an environment friendly way.
7. Replace the Phillips screw to secure the battery cover.
8. Keeping the door open, test the safe to make sure it works.

## EMERGENCY OVERRIDE KEY

1. Using the supplied Allen key unscrew one of the screws holding the Godrej plate and rotate to expose key cylinder.
2. Using one of the override keys, insert into the cylinder and turn clockwise to open the safe.
3. While the door is open and the key is still turned, follow the directions to set your PIN.



### Note:

When you set the new PIN, the key will rotate to the locked position. If you get an error message, wait until the motor stops moving and then turn the key back to locked position and remove it. Your new PIN will still remain.

### WARNING:

Keep the override keys in a safe place other than inside this safe.

These keys are to be used in emergencies when your PIN is lost or the keypad malfunctions.



## ERROR MESSAGES

Listed below are error codes you might encounter:



This means that you have pressed an incorrect pin. Verify your pin and try again. If you get this error 4 times in a row, the keypad will lock out for 15 minutes.



This means you have entered the lockout period. No pin will function until the 15 minutes is up. By pressing any key during this period you can see how much time is left until the lockout is over. If your pin still doesn't work, use the override keys to reset the safe.



This means that the bolts failed to retract fully. Try pressing the door in as you press your pin. If you still cannot open your safe, contact your distributor.



This could also mean that the bolts failed to extend fully. Most likely because the safe is too full. Press on the door to close it fully while pressing your PIN. If you still cannot lock your safe, contact your distributor.





## RECORD OF PURCHASE

Please fill your details below for future reference.

Date of purchase: \_\_\_\_\_

Product model: \_\_\_\_\_

Name & address of Distributor: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Distributor phone number: \_\_\_\_\_

FOR SAFETY, PLEASE READ THIS MANUAL PRIOR TO USE.



Godrej & Boyce Mfg. Co. Ltd.

Regd. Office: Pirojshanagar, Vikhroli, Mumbai 400 079

Tel: 022-67961700/1800 Fax: 91-22-67961509

Email: [secure@godrej.com](mailto:secure@godrej.com) Website: [www.godrejsecure.com](http://www.godrejsecure.com)

In view of the Godrej policy of continuous development and improvement, the dimensions and specifications may be changed without prior notice or obligation. The colours of the product in leaflet may not match the actual colours due to printing limitations.

An ISO 9001:2000 & 14001 Business.  
Products Marketed & Serviced By Godrej.