



When using the refrigerator, always exercise these basic safety precautions to avoid injury and property damage:

- Locate, install and use the refrigerator properly in accordance with the instructions given in this user's guide.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the wall socket after switching off the power supply.
- Repair/replace the power cord immediately if its frayed or damaged. Do not use a power cord that shows cracks or damage by abrasion, rodents etc.
- Do not splash water on or in the vicinity of the refrigerator. It could cause an electrical leak or malfunction.
- Young children should be supervised to ensure that they do not play with the appliance.
- After your refrigerator is in operation, do not touch the cold surfaces in the ice making compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Don't refreeze frozen foods which have thawed completely. Eating such refrozen food could harm your health. Even partial thawing and refreezing reduces the quality of foods, particularly fruits, vegetables and prepared food
- Unplug your refrigerator before cleaning or making any repairs. We strongly recommend that any servicing be performed by a qualified technician
- Do not store flammable sprays, vapour or liquids like gasoline, laquer and paint, volatile chemicals like benzene or ether, evaporating liquids like perfumes, nailpolish removers etc inside the refrigerator. It may damage the food and some of these could also cause an explosion. Avoid storing these near the refrigerator
- Do not use lubricants (lubricating oils, sprays, kerosene, WD-40 etc) on the hinges of the refrigerator doors. Some lubricants chemically react with plastics resulting in damage to doors.
- Do not tamper with the electrical circuit or the refrigerant circuit of the refrigerator.
- Do not keep anything above the refrigerator eg. lighted candles, cloth cover, electric equipment like TV and lamp, etc.
- Refrigerators contain refrigerants and insulation contains gases, which must be disposed off professionally, to avoid any safety hazards.



# Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that this product is not disposed as unsorted municipal waste.

This symbol is known as the "Crossed-out Wheelie Bin Symbol". It means that the product should not be disposed-off with your general house-hold waste. It should be disposed only through the company's collection centers with special treatment so as to prevent any damage to the environment. Please call: 1800 209 5511 or visit www.godrej.com/green-think for details about Godrej Appliances authorized collection centers or any applicable buy back arrangement.

'This product is RoHS compliant'

# 09

# सुरक्षा संबंधी सावधानियाँ

रेफ़्रिजरेटर का इस्तेमाल करते समय, चोट और संपत्ति के नुक़सान से बचने के लिए इन सामान्य सुरक्षा संबंधी सावधानियों का हमेशा पालन करें:

- इस उपभोक्ता निर्देशिका में दिए गए निर्देशों के अनुसार रेफ्रिज़रेटर को रखें, इंस्टॉल करें और इस्तेमाल करें।
- कभी भी पॉवर कोर्ड खींच कर अपने रेफ़िजरेटर को अनप्लग न करें। हमेशा पावर सप्लाय बंद करने के बाद प्लग को मज़बूती से पकड़ें और सीधे वॉल सॉकेट से निकालें।
- अगर पावर कोर्ड मुड़ा हुआ या क्षतिग्रस्त है, तो तुरंत उसकी मरम्मत करें / उसे बदल दें। किसी भी ऐसे पावर कोर्ड का इस्तेमाल न करें, जो घिसावट, कतरने वाले प्राणियों के कारण क्षतिग्रस्त हो।
- रेफ्रिजरेटर पर या उसके आस-पास पानी न छलकाए। इसके इलेक्ट्रिकल लीक या खराबी हो सकती है।
- छोटे बच्चों पर ध्यान देना चाहिए, ताकि वे उपकरण के साथ खेलें नहीं।
- जब आपका रेफ़िजरेटर काम करने लग जाए, उसके बाद आइस मेकिंग कम्पार्टमेंट में उंडी सतहों को छुएँ नहीं, ख़ास तौर पर जब आपके हाथ नम या गीले हों।
   त्वचा इन बेहट उंडी सतहों पर विपक सकती है।
- फ्रोज़न फूड्स (जमे हुए खाद्य पदार्थ) को दुबारा न जमाए अगर वे पूरी तरह पिघल चुके हों। इस तरह की जमी हुई चीज़ें खाने से आपकी सेहत को नुकसान पहुंच सकता है। आंशिक रूप से पिघली हुई चीज़ों को भी दुबारा जमाने पर उनकी गुणवत्ता पर असर पड़ता है, ख़ास तौर पर फल, सब्जियों और तैयार खाने को।
- सफाई या मरम्मत करने से पहले अपने रेफ़्रिजरेटर को अनप्लग करें। हम सुझाव देते हैं कि किसी भी प्रकार की सर्विसिंग किसी सुशिक्षित तकनीशियन द्वारा ही की जानी चाहिए।
- ज्वलनशील रम्रे, भाप या गैसोलीन, लैकर और पेंट जैसे द्रव, बेंज़ीन या ईथर जैसे अस्थिर रसायन, पपर्यूम, नेलपॉलिश रिमूवर जैसी वाष्पीकृत होने वाली चीज़ें रेफ़िजरेटर में न रखें। इससे खाद्य पदार्थ को नुकसान पहुंच सकता है और इनमें से कुछ विस्फोट का भी कारण बन सकते हैं। इन चीज़ों को रेफ़िजरेटर के आस–पास भी न रखें।
- रेफिजरेटर के दरवाजों के हिंज (कब्ज़ों) पर ल्युब्रिकंट्स (ल्युब्रिकेटिंग ऑइल, स्प्रे, केरोसीन, WD-40 इत्यादि) का इस्तेमाल न करें। कुछ ल्युब्रिकंट्स प्लास्टिक के साथ रासायनिक प्रतिक्रिया करते हैं. जिससे दरवाजों को नकसान पहंचता है।
- रेफ्रिजरेटर की इलेक्टिकल सर्किट या रेफ्रिजरट सर्किट के साथ छेडछाड न करें।
- रेफ़िज़रेटर के ऊपर कोई चीज़ न रखें जैसे जली हुई मोमबत्ती, कपड़े कवर, टीवी जैसे बिजली के उपकरण और लैम्प इत्यादि।
- रेफ्रिजरेटर्स में रेफ्रिजरंट्स होते हैं और इंसुलेशन में गैसें होती हैं, किसी भी तरह के सुरक्षा संबंधी ख़तरे से बचने के लिए इन्हें पेशेवर तरीके से निकाला जाना चाहिए।



# पर्यावरण की सुरक्षा

पर्यावरण की जुरुश पर्यावरण की जुरुश के किसित न किया जाए।

इस बिह्न को ''क्रॉस्ड-आउट व्हीली बिन रिम्बॉल'' कहा जाता है। इसका मतलब है कि इस उत्पाद को आपके सामान्य घरेलू कुड़े के साथ निष्कासित नहीं किया जाना चाहिए। इसे सिर्फ कंपनी के कलेक्शन सेंटर्स के माध्यम से विशेष व्यवस्था के साथ निष्कासित किया जाना चाहिए, लाकि पर्यावरण को कोई नुकसान न पहुंचे। कृपया गोदरेज अप्तायंसेज के प्राधिकृत कलेक्शन सेंटर्स या किसी भी लागू बाय बैंक व्यवस्था की जानकारी के लिए कॉल करें: 1800 209 5511 या www.godrej.com/green-think देखें।

'यह उत्पाद RoHS अनुरूप है'

# FREQUENTLY ASKED QUESTIONS

- How often should I defrost my refrigerator?
- Ans. It is good to defrost the refrigerator every 3 days to avoid water spillage and ensure optimal cooling performance. You may need to do it more often depending on your temperature settings. It is a must to do it at-least once a week.
- . Is it ok to run my refrigerator on inverter or generator?
- $\hbox{Ans.} \quad \hbox{You can use a generator if needed depending on its capacity, but inverters are not advisable.}$
- Q. How often should I clean my refrigerator?
- Ans. You should clean the refrigerator once a month as per instructions given in this guide.
- Q. Why is there moisture in the vegetable tray?
- Ans. As water in the vegetables evaporates, the vapours condense against the cold refrigerator tray surfaces resulting in water droplets.

# अक्सर पूछे जाने वाले प्रश्न

- मुझे अपने रेफ्रिजरेटर को कितनी बार डीफ्रॉस्ट करना चाहिए?
- 3. पानी छलकने से बचने और कूलिंग का अच्छा प्रदर्शन सुनिश्चित करने के लिए रेफ़िजरेटर को हर 3 दिन में डीफ्रॉस्ट करना अच्छा होता है। आपकी तापमान की सेटिंग के आधार पर आपको इसकी बारबारता बढ़ानी पड़ सकती है। कम से कम समाह में एक बार यह करना ज़रूरी है।
- प्र. क्या मेरे रेफ्रिजरेटर को इनवर्टर या जेनरेटर से चलाना उचित होगा?
- उ. क्षमता के आधार पर आप जेनरेटर का इस्तेमाल कर सकते हैं, लेकिन इनवर्टर के इस्तेमाल का सुझाव नहीं दिया जाता।
- प्र. मुझे मेरा रेफ्रिजरेटर कितनी बार साफ़ करना चाहिए?
- उ. आपको इस मार्गदर्शिका में दिए गए निर्देशों के अनुसार रेफ्रिज़रेटर को साफ़ करना चाहिए।
- प्र. वेजीटेबल ट्रे.में नमी क्यों है
- सब्जियों में से पानी वाष्पीकृत होने के कारण रेफ्रिजरेटर के ट्रे की ठंडी सतहों पर भाप जमने लगती है जिससे पानी की बूंदें बनती हैं।

# WARRANTY / वॉरटी

The Godrej Refrigerator comes with additional warranty\* (refer Terms & Conditions for details) on COMPRESSOR and a ONE year warranty on all other parts (Except bulb, glass and add-on rubber and plastic parts) from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej & Boyce Mfg. Co. Ltd. - Appliance Division will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges

# INSTRUCTIONS FOR THE CUSTOMER

- 1. Kindly ensure that the dealer fills the warranty card correctly and completely.
- 2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
- 3. In the event of a defect developing in the product, contact the nearest authorized company Service Center for obtaining warranty service and provide the defect, model details & serial no.
- 4. Earthing of the appliance is necessary to ensure safety.
- 5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible, and the warranty stands terminated.
- 6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock etc. and in turn, the warranty stands terminated.
- 7. The product must be maintained to ensure hygiene. If there are any insects, rodents etc. in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
- 8. If you are moving house, it is essential that a company service representative inspects the refrigerator at the time of re-installation at the new address. The warranty on the product/optional service contract for the sealed system of the refrigerator continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.
- 9. Please follow the guidelines given regarding refrigerator, digital panel and music player usage.
- 10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.

# Godrej & Boyce Mfg. Co. Ltd. - Appliance Division CUSTOMER COPY

MODEL NO. UNIT SR. NO.

CUSTOMER'S NAME & ADDRESS

# DATE OF PURCHASE

DEALER'S NAME & ADDRESS	
TEL	

# Customer's Signature:

This warranty is valid only if it is filled in and stamped by our authorised dealer on the date of purchase. Warranty for the Display Board/Control Panel stands null and void in the following cases:

1. Water or other such liquids, foreign particles etc. seep into the Display Board/Control Panel components resulting in malfunctioning of the system or any other component of the refrigerator. 2. Foreign particles accumulate in the Display Board/Control Panel & it gets rusty. 3. Capsense damage due to excessive pressure exerted during operation, resulting in switch/product malfunction.

# Warranty for the music player stands null and void in the following cases:

1. Water or other such liquids, foreign particles, etc. seep into the music player components resulting in malfunctioning of the sound system or any other component of the music player. 2. Foreign particles accumulate in the USB port or USB port gets rusty. 3. Keypad sticker tears off due to excessive pressure exerted during operation, resulting in switch/product malfunction.

# Overall warranty also stands null and void if:

1. The warranty card is not completed properly at the time of the purchase. 2. The completed warranty card is not presented to the authorised personnel at the time of service of the product. 3. The refrigerator is not operated according to instructions given in the User's Guide. 4. Defects are caused by improper use, which shall be determined by the company personnel. 5. Damage is caused to the refrigerator or any parts due to transportation or shifting. 6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service center or purchaser's residence. 7. The serial number is deleted, defaced or altered.

# TERMS AND CONDITIONS

1. \*Compressor warranty applicable basis the following criteria:

WARRANTY ON COMPRESSOR	APPLICABLE PRODUCTS
Five Year	All Direct cool models with total volume less than 175 Litres
Ten Year	All Direct Cool models with total volume equal to and more than 175 litres

(Please refer to the total volume mentioned on the Star Rating label of your refrigerator)

- 2. Repairs and replacements of parts will be carried out through the authorised Customer Service Centre.
- 3. All transportation and handling expenses incurred while repairing will be payable by the customer.
- 4. For any appliance installed beyond the municipal limits of the jurisdiction of the authorised customer service centre, charges towards technician's visit will be borne by the customer.
- 5. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- 6. The company/its authorised personnel will collect any parts, compressor or other components replaced during warranty period only.
- 7. Warranty does not cover accessories to the appliance.
- 8. Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
  9. The company's obligation under this warranty shall be limited to repair or providing replacement of parts only.
- The maximum claim's if entertained by the company will be subject to the maximum retail price of the product purchased or purchase price, whichever is lower.
- 10. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
- 11. Warranty is not applicable in case the original number (Serial No. Sticker) is removed, obliterated or altered from the machine or cabinet.
- 12. Warranty automatically expires after the stipulated period from the original date of purchase, even if the refrigerator was not in use for anytime for whatever reasons.



# USER MANUAL DIRECT COOL REFRIGERATOR

Godrej & Boyce Mfg. Co. Ltd. - Appliance Division


# CONTENTS / विषय सूची

1.	PARTS IDENTIFICATION
2.	TECHNICAL AND COMMERCIAL PRODUCT INFORMATION
3.	INSTALLATION
4.	OPERATION
5.	CLEANING
6.	USEFUL SUGGESTIONS FOR STORAGE AND OPERATION
7.	BEFORE CALLING FOR SERVICE
8.	SAFETY PRECAUTIONS
9.	FREQUENTLY ASKED QUESTIONS
10.	WARRANTY





# PARTS IDENTIFICATION / पार्ट्स की पहचान

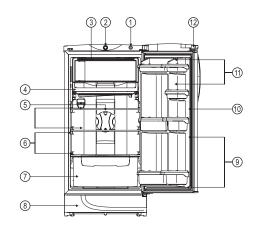

- 1 Light Switch
- Thermostat (Temperature control)
- and Defrost Button 3. Ice Making Compartment\*
- 4. Easy Slide
- Lamp
- Adjustable Shelves

10. Step Utility Shelves

- Vegetable Tray Dry Store
- Bottle Shelves
- 11. Utility Shelves
- 12. Door Lock


Applicable for Edge, Edge SX and Edge Pro models.

OVERALL DIMENSIONS

With Drawer

1340 1340 577

1176 1176 574

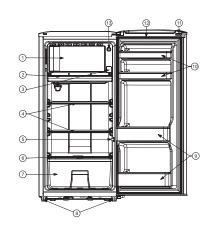

- 1 Ice Making Compartment
- 2. Easy Slide
- Light Bulb
- Toughened Glass Shelves Light Switch
- Vegetable Tray cover Vegetable Tray
- Levelling Leg
- Bottle Shelves
- 10. Utility Shelves
- 11. Door Lock
- 12. Door Gasket
- 13. Thermostat (Temperature control) and Defrost Button

125-135°

Required in Use (mm)\*\*

Applicable for Edge Neo, Edge Rio, Edge Rio+, Edge Jazz and Edge Marvel models

Image shown is representative only. Some parts are specific to certain models. Hence, there could be some parts which are

**TECHNICAL AND COMMERCIAL PRODUCT INFORMATION** 

SPACE REQUIRED IN USE

(W) W/o With W/o With Handle Handle Handle Handle

185 1250 1250 577 640 667 640 667 877 1144 1095

660 627 180 1190 1310 575 625 640 625 640 875 1138 1110

622 645 622 645 874

1260 1260 575 626 660 626 660 875 1145 1120

 1256
 1256
 574
 622
 645
 622
 650
 874
 1140
 1170

 180
 1176
 1176
 574
 622
 645
 622
 645
 874
 1140
 1020

206 | 1360 | 1360 | 574 | 622 | 645 | 622 | 650 | 874 | 1140 | 1170

233 1500 1500 574 622 645 622 650 874 1140 1170 175 1260 1260 574 624 660 624 660 874 1125 1090 180 1310 1310 576 - 671 - 671 876 1138 1107 200 1410 1410 576 - 671 - 671 876 1138 1107 95 850 - 487 568 - 568 - 787 1002 972

640

1300 575 627

Due to continuous improvements happening in products the specification mentioned in above table may change without prior notice

1190 1310 575 625 640

1480 1480 577 640 667 640 667 877

# INSTALLATION

### 1. Select the right location

- Avoid extreme heat and cold. Place your refrigerator away from direct sunlight and heat sources such as cooking stove etc. and air drafts like windows, fans etc. Keep away from the gas cylinder,
- Place your refrigerator close to an electric outlet. Do not use extension cord.
- For safety purposes, remove all packaging related material like thermocol, polythene etc. before
- Refrigerators should operate in rated climate class (T) for better performance (+16°C to +43°C).

- While installingProvide at least 6 inches space on both sides to ensure adequate air circulation.
- There is stopper bracket at the back side of refrigerator which needs to be open as shown in image 1. Install the refrigerator on a flat and firm surface.
- If the floor is not level, use packing to keep your refrigerator stable.
- In models with levelling legs, rotate the front two legs to level the refrigerator. For safety purposes, adjust the front side a little higher than the back side.
- In case of model with levelling leg, keep legs such that it supports auto closure of door.

# Factory Setting

\*Brackets are in selected model

# 3. Connect 🔨

- Your refrigerator operates on AC 230 V, 50 Hz power supply. A voltage stabiliser is advisable if there is a wide fluctuation in supply voltage. Connect the plug to a 3 pin, 5 amps socket. Ensure the wall socket is properly earthed by a qualified electrician. It is safe to use a socket with a fuse and a switch.
- Wires should be kept off the floor to prevent short circuits in case of water leakage.
- Switch on the power supply. Set the temperature at maximum setting and let the machine run for about 4 hours. Then turn the knob to adjust your desired setting.

## 4. Recycle

After installing, recycle/reuse the corrugated box fitments and polythene cover/straps to help the


# इस्टॉलेशन

# 1. सही जगह चुनें

- बहुत ज़्यादा गर्मी और ठंड से बचें। अपने रेफ़िजरेटर को खुली धूप और कुकिंग स्टोव जैसे गर्मी के स्रोतों और खिड़कियों, पंखों जैसे हवा के स्रोतों से दर रखें। गैस सिलिंडर से दर रखें।
- अपने रेफ्रिज़रेटर को इलेक्ट्रिक आउटलेट के पास रखें। एक्सटेंशन कॉर्ड का इस्तेमाल न करें।
- सरक्षा के लिए, थर्मोंकोल, पॉलीथीन जैसी सभी पैकेजिंग सबधी सामग्रियों को इस्टॉलेशन से पहले हटा दें।
- रेफ्रिजरेटर को बेहतर परफॉर्मेंस के लिए रेटेड क्लायमेट श्रेणी (T) में चलाया जाना चाहिए। (+16°C to +43°C)

# इस्टॉल करते समय:

- हवा का पर्याप्त बहाव बनाए रखने के लिए दोनों तरफ कम से कम 6 इंच की जगह रखें।
- रेफ़िज़रेटर के पीछे स्टॉपर ब्रैकेट होता है, जिसे तसवीर 1 में दिखाए गए तरीके से खोला जाना चाहिए
- रेफ्रिजरेटर को एक समतल और कठोर सतह पर इस्टॉल करें
- अगर फर्श समतल नहीं है, तो रेफ्रिज़रेटर को स्थिर रखने के लिए पैकेजिंग का इस्तेमाल करें।
- लेवेलिंग लेग्स वाले मॉडल्स में, रेफ्रिज़रेटर को समतल करने के लिए आगे के दो लेग्स को घुमाएं। सरक्षा के उद्देश्य से आगे के हिस्से को पीछे से थोड़ा सा ऊपर रखें।
- लेवलिंग लेग वाला मॉडल होने पर लेग्स को इस तरह रखें, कि यह यह रेफ्रिज़रेटर की अपने–आप बंद होने में सहायता करे।



\*Brackets are in selected model

# 3. जोड़ें: 🔼

- आपका रेफ़िज़रेटर AC 230 V, 50 Hz पावर सप्लाय पर काम करता है। अगर सप्लाय वोल्ट्रेज में बहुत ज़्यादा उतार-चढ़ाव होता है, तो एक वोल्टेज स्टेबिलाइज़र का इस्तेमाल करना चाहिए। प्लग को एक 3 पिन, 5 ऐम्प्स सॉकेट में लगाए। **सुनिश्चित करें कि दीवार का सॉकेट एक** स्शिक्षित इलेक्ट्रिशयन द्वारा सही तरीके से अर्थ किया गया है।
- तारों को फर्श से दर रखा जाना चाहिए, ताकि पानी का रिसाव होने पर शॉर्ट सर्किट न हो।
- पावर सप्लाय को ऑन करें। तापमान के सप्लाय को अधिकतम सेटिंग पर रखें और मशीन को लगभग 4 घंटे तक चलने दें। इसके बाद नॉब को अपनी मनचाही सेटिंग पर एडजस्ट करें।

# रीसाइकल (पुनर्चक्रण) करें:

• इंस्टॉल करने के बाद, पर्यावरण की सहायता के लिए कोरुगेटेड बॉक्स फिटमेंट्स और पॉलीथीन कवर/पिट्टयों को रीसाइकल (पुनर्चक्रित) करें या उनका दबारा इस्तेमाल करें।

# **OPERATION**

# 1. Temperature Setting

- Set the temperature control knob towards maximum/coldest during peak summer hours or more load. Set it to minimum during winters or less load.
- Temperature is affected by several factors like refrigerator location, room temperature, door openings, humidity etc. So, adjust temperature accounting for these factors.
- Do not set the temperature colder than required. It will increase energy consumption.
- Do not open the door frequently. Ensure the door is closed properly after every use to avoid cooling loss and

- 2. Defrosting Regular defrosting helps to remove excess frost and helps proper cooling. It reduces running time and therefore power consumption.
- Remove all stored items from the ice making compartment before you
- To defrost, press the button on the temperature control knob. The frost will
- melt and drip into the evaporation tray, from where it will eventually evaporate.
- After defrosting is finished, the refrigerator will restart automatically.
- Defrosting should be done every three days. Hot and humid conditions will lead to faster frost formation, needing frequent defrosting. Frost should not exceed 6mm. Delay in frosting would lead to water spilling in the refrigerator. Do not use sharp objects to remove ice from the ice making compartment. Avoid opening the door during defrosting.

# कार्य पद्धति

# 1. तापमान की सेटिंग

- बहुत ज़्यादा ग़र्मी के घटों में या ज़्यादा लोड़ के दिनों में तापमान के कट्टोल नॉब को अधिकतम/सबसे ठंड़े स्तर पर रखें। सर्दियों या कम लोड़ के दिनों में इसे
- तापमान कई घटकों से प्रभावित होता है, जैसे रेफ़िजरेटर की जगह, कमरे का तापमान, दरवाज़े का खुलना, ह्यूमिडिटी (आईता) इत्यादि। इसलिए इन चीज़ों को ध्यान में रखते हुए तापमान को एड्जस्ट करें।
- तापमान को ज़रूरत से ज़्यादा ठड़ा न रखें। इससे बिजली की खपत बढ़ जाएगी।
- बार-बार दरवाज़े को न खोलें। कूलिंग के नुकसान और अन्य सुरक्षा संबंधी ख़तरों से बचने के लिए हर बार इस्तेमाल के बाद सुनिश्चित करें कि दरवाज़ा अच्छी तरह बंद है।

- नियमित डीफ्रॉस्टिंग अतिरिक्त फ्रॉस्ट को निकालने में मदद करती है और उचित कलिंग देती है। यह चलाने का समय कम करती है, जिससे बिजली की बचत होती है।
- डीफॉस्ट करने से पहले सभी चीजों को आइस मेकिंग कम्पार्टमेंट से हटा लें।
- डीफ्रॉस्ट करने के लिए, टेम्प्रेचर कट्टोल नॉब पर दिया गया बटन दबाए। फ्रॉस्ट पिघल कर एवैपोरेशन ट्रे. में चली जाएगी. जहाँ से यह अंत में इवैपोरेट यानि कि वाष्पीकत हो जाएगी।
- डीफ़ॉटिंग परी हो जाने के बाद, रेफ़िजरेटर अपने आप चाल हो जाएगा।
- डीफ़ॉस्टिंग हर तीन दिन बाद की जानी चाहिए। ग़र्म और नम तापमान में फ़ॉस्ट ज़्यादा जल्दी जमती है, जिसके लिए ज़्यादा बार डीफ़ॉस्टिंग करनी पड़ती है। फ्रॉस्ट 6mm से ज़्यादा नहीं जमनी चाहिए। फ्रॉस्टिंग में किसी भी तरह की देरी होने पर रेफ्रिजरेटर से पानी छलकने लगेगा। आइस मेकिंग कम्पार्टमेंट से बर्फ निकालने के लिए नुकीली चीज़ों का इस्तेमाल न करें। डीफ़ॉस्टिंग के दौरान दरवाज़े को न खोलें।

# • It is advisable to clean your refrigerator once a month.

- Before cleaning, switch it off. Remove the plug and all food items.
- Use a mild soap solution and wipe gently to clean both interior and exterior. Dry with clean cloth and leave the
  door open to dry. Clean oil stains and any spilled liquid immediately to avoid any damage to the refrigerator. Do not let water go into the light bulb and other electrical components. Never use any chemicals or abrasives

**CLEANING** 

- Cockroaches and insects can only go in through the door. So, close it properly after every use.
- Keep the exterior dry to avoid rusting. Especially the lower front edge and the bottom surfaces of the door.
- · Periodic cleaning of your refrigerator, especially gaskets, will prevent it from getting loose and replacing the · Keeping the gasket unclean may negatively affect the performance. Always ensure that the gasket is installed
- Spillage of liquids (fruit juices/cold-drinks/sweet syrups/lassi) or solid sweet food substances on the
- refrigerator's external/internal surfaces or the gasket may make the surfaces or gasket sticky during usage. Customers are advised to immediately clean up with normal water and then wipe it with a dry cloth.
- · Cleaning the refrigerator, especially all front surfaces and gaskets periodically will avoid the gasket from getting loose and avoid replacements of the gaskets.

  Gaskets, if kept unclean during the usage, may result in gasket gaps/ gasket folds and may also affect the
- performance of the refrigerator.

- आपके रेफ़िज़रेटर को महीने में एक बार साफ़ करना अच्छा होता है
- सफाई से पहले. इसे बंद कर लें। प्लग को और सभी खाने की चीजों को निकाल लें।
- एक सौम्त साबन के घोल का इस्तेमाल करें और इटीरियर तथा एक्सटीरियर दोनों को हल्के हाथों से पोंछ कर साफ करें। साफ कपड़े से पोंछ कर सखने के लिए दरवाज़े को खुला छोड़ दें। तेल और किसी भी छलके हुए लिक्विड के दागों को साफ़ कर लें, ताकि रेफ़िजरेटर को कोई नुकसान न पहुंचे।
- लाइट बल्ब या और अन्य बिजली के हिस्सों के भीतर पानी न जाने दें। सफ़ाई के लिए कभी भी किसी केमिकल या अब्रेसिव (घिसावट पैदा करने वाले पदार्थ)
- कॉक्रोचेज (तिलचट्टे) और कीड़े सिर्फ दरवाजे से ही भीतर जा सकते हैं। इसलिए हर बार इस्तेमाल करने के बाद उसे अच्छी तरह बंद करें।
- जंग से बचने के लिए एक्सटीरियर को सुखा रखें। ख़ास तौर पर सामने के निचले किनारों और दरवाजे के निचले हिस्सों का ध्यान रखें। • रेफ़िज़रेटर, और ख़ास तौर पर गास्केट्स की समय—समय पर सफ़ाई उसे ढीला नहीं होने देगी और उसे बदलने की ज़रूरत नहीं पड़ेगी।
- गास्केट को गदा रखना परफॉर्मेंस पर नकारात्मक प्रभाव डाल सकता है। और सफ़ाई के बाद सुनिश्चित करें कि गास्केट सही तरीके से लगा हुआ है।
- रेफ्रिजरेटर की भीतरी/बाहरी सतह पर पेय पदार्थ (फलों का रस/कोल्ड डिक्स/मीठे सिरप/लस्सी) या ठोस मीठे खाद्य पदार्थों के छलकने से गास्केट
- इस्तेमाल के दौरान चिपचिपा हो सकता है। ग्राहकों को सलाह दी जाती है कि वे तुरत इसे सादे पानी से साफ करें और फिर सूखे कपड़े से पोछ दें। • ऐफिजरेटर और खास तौर पर गास्केट्स की समय-समय पर सफाई उसे ढीला नहीं होने देगी और उसे बदलने की जरूरत नहीं पड़ेगी।
- इस्तेमाल के दौरान गास्केट्स को गदा रखने से गास्केट में ख़ाली जगह/गास्केट मुड़ने जैसी समस्याएँ हो सकती हैं और रेफ़िजरेटर के परफॉर्मेंस पर असर पड सकता है।

# **USEFUL SUGGESTIONS FOR STORAGE AND OPERATION**

- All food should be fresh before refrigeration. As food can be preserved, not rejuvenated.
- Frozen foods are not safe for freezing if they are thawed before storing in the fridge.
- It is better to freeze meat in bigger pieces. Avoid mincing the meat in advance. All frozen foods should either be packed in containers or wrapped in polythene bags or aluminum foil.
- Bread, cake and pastries should be properly wrapped in containers.
- Butter, margarine and other fats can be stored in their original wrappings and in covered containers if in use.
- Loosely wrap all vegetables, especially leafy vegetables in polythene bags. Fruits and vegetables with strong odour should be wrapped tightly.
- Certain vegetables like fresh beans and lady fingers should not be washed before storing. If fruits and
- vegetables are washed, drain all the water before storing as it increases the possibility of spoilage and decay. Mushrooms, melons and peaches can only be chilled and not preserved. Hot food/Boiled milk should be cooled down to room temperature before storing.
- Ginger, garlic and red-chillies paste can stay in the ice making compartment and chutneys in the main fridge compartment
- Ice creams should always be stored in the ice making compartment with max cooling settings. It may still stay
- slightly soft as the retailers store ice creams in deep freezers.

  Bottles containing water and other liquids should be tightly capped. Should not be stored in the ice making compartment section.
- Unopened canned food need not be stored in the refrigerator.

# स्टोरेज और इस्तेमाल के लिए उपयोगी सुझाव

- सभी खाद्य पदार्थ रेफ़िजरेशन से पहले ताजे होने चाहिए। खाद्य पदार्थों को ख़राब होने से बचाया जा सकता है. लेकिन ख़राब चीजों को फिर से ठीक नहीं किया
- फ्रोज़न फूड्स जमाने के लिए सुरक्षित नहीं होते, अगर उन्हें फ्रिज़ में रखने से पहले पिघलाया गया हो।
- मास को बड़े टुकड़ों में फ्रीज़ करना बेहतर होता है। पहले से मास का कीमा न बनाए।
- सभी फ्रोज़न फूड्स को या तो डब्बों में पैक किया जाना चाहिए या पॉलीथीन बैम्स या अल्युमिनियम फॉइल में लपेटा जाना चाहिए।
- ब्रेड, केक और पेस्ट्री को डब्बों में अच्छी तरह बद किया जाना चाहिए।

लें, क्योंकि इससे उनके ख़राब होने और सड़ने की संभावना बढ़ जाती है।

- मक्खन, मार्गरीन और अन्य फैट्स (वसाओं) को उनकी वास्तविक रैपिंग्स में रखें और इस्तेमाल में होने पर बंद डब्बों में रखें।
- सभी सब्जियों को, ख़ास तौर पर पत्तियों वाली सब्जियों को पॉलीथीन बैग्स में ढीला बांध दें। तेज़ गंध वाले फलों और सब्जियों को अच्छी तरह लपेटा जाना चाहिए।
- ताज़ी बीन्स और भिंडी जैसी कुछ सब्ज़ियों को रखने से पहले धोना नहीं चाहिए। अगर फलों और सब्ज़ियों को धोया गया है, तो रखने से पहले पानी को निकाल
- मशरूम, तरबूज-खरबूज और आड़ को सिर्फ ठंडा किया जा सकता है, सुरक्षित नहीं रखा जा सकता। • गर्म चीज़ों / उबले हुए दूध को रखने से पहले ठड़ा करके कमरे के तापमान पर लाया जाना चाहिए।
- अदरक, लहसुन और लाल मिर्च के पेस्ट को आइस मेकिंग कम्पार्टमेंट में और चटनी को मेन फ्रिज कम्पार्टमेंट में रखा जा सकता है • आइस क्रीम को आइस मेकिंग कम्पार्टमेंट में अधिकतम कूलिंग सेटिंग्स पर रखना चाहिये। इसके बाद भी उनके थोड़े नर्म रहने की संभावना होती है, क्योंकि
- रीटेलर्स आइस क्रीम को डीप फ्रीजर्स में रखते हैं।
- पानी और अन्य लिक्निज़्स वाली बोतलों पर कस कर ढक्कन लगाया जाना चाहिए। इन्हें आइस मेकिंग कम्पार्टमेंट सेक्शन में नहीं रखा जाना चाहिए। नहीं खोले गए कैन्ड फूड़ (डिब्बाबंद खाद्य पदार्थ) को रेफ्रिजरेटर में रखने की आवश्यकता नहीं होती।

# **BEFORE CALLING FOR SERVICE**

If your refrigerator is not working properly, check the following before you call for service assistance:

- 1. Power plug is connected properly.
- 2. Fuse is intact and power supply is normal.
- 3. Temperature control knob is set correctly.
- 4. Defrosting has been done to eliminate excess frost. 5. Refrigerator is not crowded with little space between food items, blocking the air circulation inside.

To replace the lamp: Switch off the refrigerator. Disconnect the plug. Gently remove the bulb cover. Turn the lamp anti-clockwise to remove it. Replace it with the new 15W normal bulb/1.5W LED bulb and fit the lamp cover back.

Note: You may find water droplets on opening the door. This is normal condensation and not a defect.

# सर्विस के लिए कॉल करने से पहले

अगर आपका रेफ़िज़रेटर सही तरीके से काम नहीं कर रहा है, तो सर्विस संबंधी सहायता के लिए कॉल करने से पहले निम्नलिखित की जाँच करें।

- 1. पावर प्लग सही तरीके से लगा हुआ है
- 2. पयज सही है और पावर सप्लाय सामान्य है
- 3. टेम्प्रेचर कट्टोल नॉब को सही तरीके से सेट किया गया है
- 4. अत्यधिक फ्रॉस्ट निकालने के लिए डीफ्रॉस्टिंग की गयी है 5. रेफ्रिजरेटर में खाने की चीज़ों को बहुत ज़्यादा ठूंस कर नहीं रखा गया है, जिससे भीतर की हवा बाधित हो रही हो।

**लैम्प बदलने के लिए:** रेफ़िजरेटर को बंद करें। प्लग को निकाल लें। धीरे से बल्ब कवर को निकालों। लैम्प को निकालने के लिए उसे घडी की विपरीत दिशा में घूमाए। इसकी जगह 15W का सामान्य बल्ब / 1.5W LED बल्ब लगा दें और लैम्प कवर फिर से फिट कर दें।

**ध्यान दें:** आपको दरवाजा खोलने पर पानी की बुदें दिखाई दे सकती हैं। यह सामान्य कड़ेंसेशन (द्रवण) है, और कोई खराबी नहीं है।



TOTAL

VOLUME

(L)\*

205

EDGE PRO

JAZZ

EDGE



